


PARTS BREAKDOWN FOR 4" EXTENDED CUT-OFF TOOL - MODEL ATQP40EA

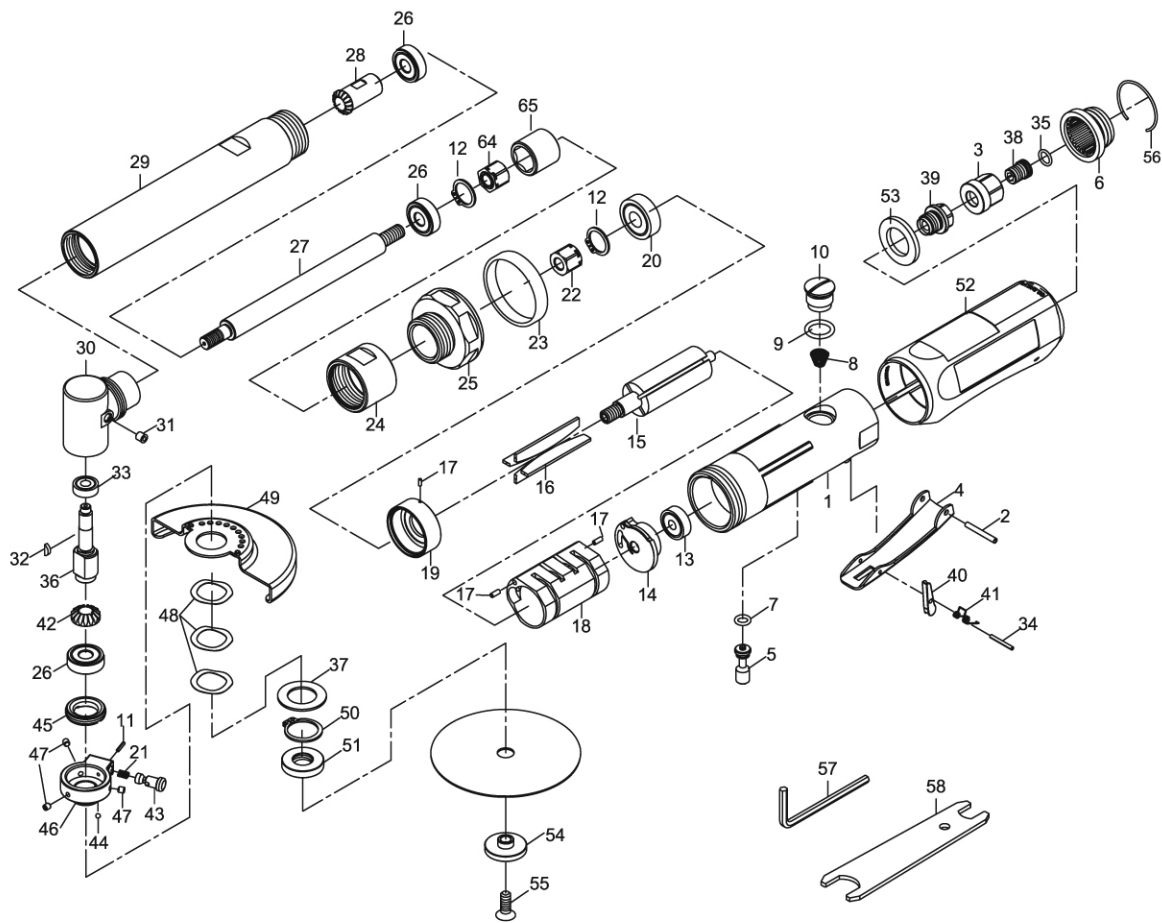

Index No.	Parts No.	Description	Index No.	Parts No.	Description
1	ATQP30S-01	Motor Housing	33	AGQP50M-13	Ball Bearing (696zz)
2	AD3800AH-02	Spring Pin (3x24)	34	AG200-38	Spring Pin (2x18)
3	ATQP30S-03	Air Inlet	35	ARQP380-46	O-Ring (7.5x1.5)
4	AGQP100-04	Throttle Lever	36	ATQP30S-36	Spindle
5	AGQP100-05	Valve Shaft	37	ATQP30S-37	Washer
6	AD3800AH-48	Exhaust Diffuser	38	AGQP100-39	Screw
7	AD54013	O-Ring (4.8x1.9)	39	ATQP30S-39	Fixed Shaft
8	AGQP100-08	Valve Spring	40	AGQP100-40	Safety Bar
9	AGQP100-09	O-Ring (11.8x2.4)	41	AGQP100-41	Spring
10	AGQP100-10	Plug	42	ATQP30S-42	Bevel Gear
11	ATQP30S-11	Spring Pin (2x10)	43	ATQP30S-43	Stop Button
12	ATQP30S-12A	Retaining Ring (2) (STW-15)	44	ATQP30S-44	Steel Ball (9/64")
13	AD54006	Ball Bearing (626zz)	45	AGQP50AM-31	Clamp Nut
14	ATQP30S-14	Rear End Plate	46	ATQP30S-46	Cover Seat
15	ATQP30S-15A	Rotor	47	ATQP30S-47	Set Screw (3) (M4x4)
16	ATQP30S-16	Rotor Blade (4)	48	ATQP30S-48	Wave Washer (3) (WW-20)
17	ATQP30S-17	Spring Pin (3) (2.5x6)	49	ATQP40E-49	Disc Cover
18	ATQP30S-18	Cylinder	50	ATQP30S-50	Retainer Ring (STW-20)
19	ATQP30S-19A	Front End Plate	51	ATQP30S-51	Flange
20	ATQP30S-20	Ball Bearing (6000zz)	52	AGQP100-52	Rubber Grip
21	ATQP30S-21	Spring	53	ATQP30S-53	Muffler
22	ATQP30S-22A	Nut	54	ATQP30S-54	Flange nut
23	ATQP30S-23	Decoration Ring	55	ATQP30S-55	Screw (M6x18L)
24	ATQP30S-24	Connector Nut	56	ATQP30S-56	Retainer Ring
25	ATQP30S-25A	Clamp Nut	57	AS20-59	Hex-Key Wrench (4mm)
26	AD3800AH-20	Ball Bearing(3) (608zz)	58	AGQP50M-27	Spanner (11mm,17mm)
27	ATQP40E-27A	Roller Shaft	63	ATQP40E-63	Disc Wheel 4"
28	ATQP30S-28	Bevel Gear	64	ATQP40E-64A	Nut
29	ATQP40E-29A	Connector Pipe	65	ATQP40E-65A	Connector
30	ATQP30S-30	Head			
31	AWQP120M-26	Oil Cap			
32	AGQP50AM-36	Key			