

Replacement Parts for Model BK104

Ref No.	Part#	Description	Qty
1	F040-41500-000	Extension Tube (19-1/2")	1
2	F040-41100-000	Extension Tube (16-1/2")	1
3	F040-41200-000	Extension Tube (8-1/2")	1
4	F040-41300-000	Extension Tube (6-1/8")	1
5	F040-41400-000	Extension Tube (3")	1
6	F040-41600-000	Male connector	1
7	F040-40001-000	Wedge Head	1
8	F040-40003-000	Serrated Saddle	1
9	F040-44000-000	Flat Base	1
10	F040-40005-000	Plunger Toe	1
11	F040-40004-000	Ram Toe	1
12	F040-43000-000	Rubber Head	1
13	F040-40002-000	Combination Head	1
14	F040-42000-000	Hydraulic Spreader (1000 lb. capacity)	1
15	F040-20012-000	Dust Cover - Hose	1
16	F040-30007-000	Dust Cover - Ram	1
17	F040-90009-K05	Hose Coupler, Male	1
18	F040-90009-K04	Ram Coupler Assy, Female	1
19	F040-30000-000	Ram Assembly	1
20	F040-21000-000	Release Valve Knob	1
21	F040-90009-K03	Pump Handle	1
22	F040-22000-000	Hose Assembly (with coupler)	1
23	F040-90107-K02	Oil Filler Screw	1
24	F040-90038-K06	Pump Assembly	1
25	F040-00001-000	Blow Mold Case	1
-	F0400S-85	Repair Kit	-
-	BK104-L0	Label	1
-	BK104-M0	Manual	1

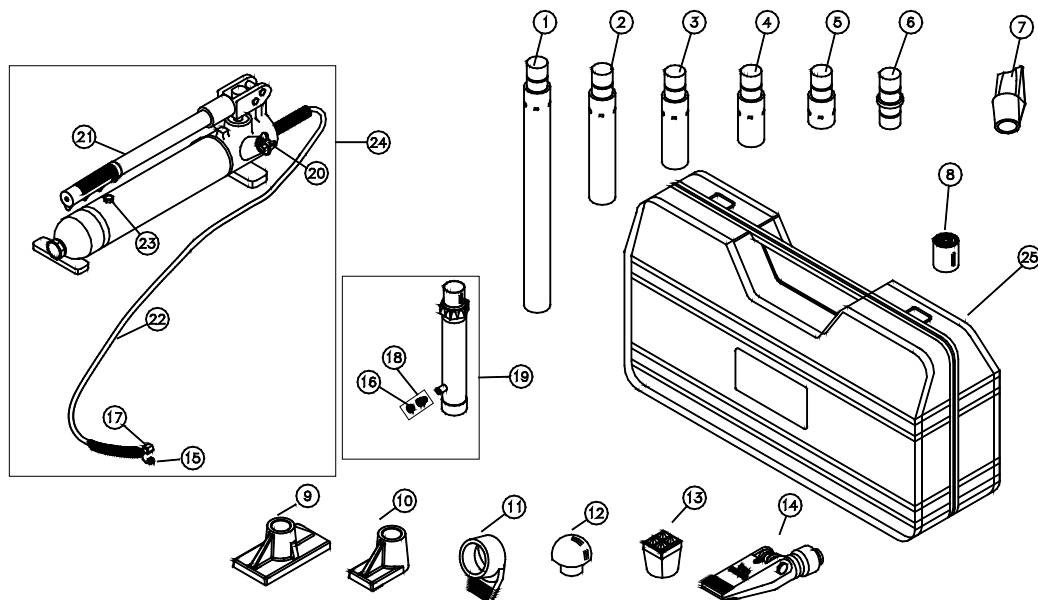


Figure 7 - Replacement Parts Illustration for Model BK104