

## Replacement Parts List for Model BK110

Ref No	Part#	Description	Qty
1	F100-41100-000	Extension Tube (27")	1
2	F100-41200-000	Extension Tube (18")	1
3	F100-41300-000	Extension Tube (10")	1
4	F100-41400-000	Extension Tube (4")	1
5	F100-41500-000	Male Connector	1
6	F100-40002-000	Wedge Head (offset)	1
7	F100-40004-000	Serrated Saddle	1
8	F100-40001-000	Flat Base	1
9	F100-40006-000	Plunger Toe (offset)	1
10	F100-40005-000	Ram Toe (offset)	1
11	F100-42000-000	Rubber Head	1
12	F100-40003-000	Combination Head (90°)	1
13	F040-42000-000	Hydraulic Spreader (1000 lb. capacity)	1
14	F040-20012-000	Dust Cover - Hose	1
15	F040-30007-000	Dust Cover - Ram	1
16	F040-90009-K05	Hose Coupler, Male	1
17	F040-90009-K04	Ram Coupler Assy., Female	1
18	F100-30000-000	Ram Assembly	1
19	F040-21000-000	Release Valve Knob	1
20	F100-90009-K01	Pump Handle	1
21	F040-22000-000	Hose Assembly	1
22	F040-90107-K02	Oil Filler Screw	1
23	F100-90119-K02	Pump Assembly	1
24	F100-00001-000	Blow Mold Case	1
-	F1000S-85	Repair Kit	-
-	BK110-L0	Label ( not shown)	1
-	BK104-M0	Manual	1

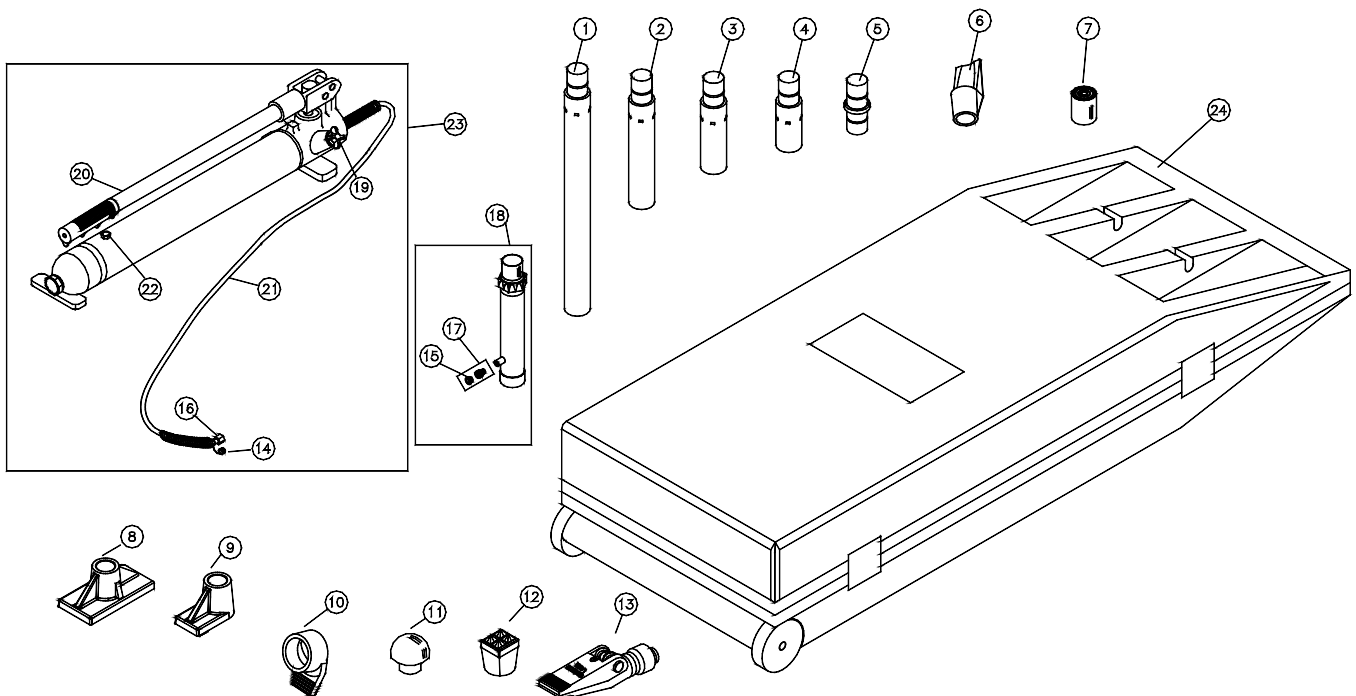


Figure 8 - Replacement Parts Illustration for Model BK110