


VM674

VER LES BOUTONS, BOULENS ET
LES TROUS DE FIXATION. NE
JET METALLIQUE

ER QU'AVEC LES DOIGTS LES
TES DE L'ETAU.
ERRER LES POIGNEES DES
ES POIGNEES.

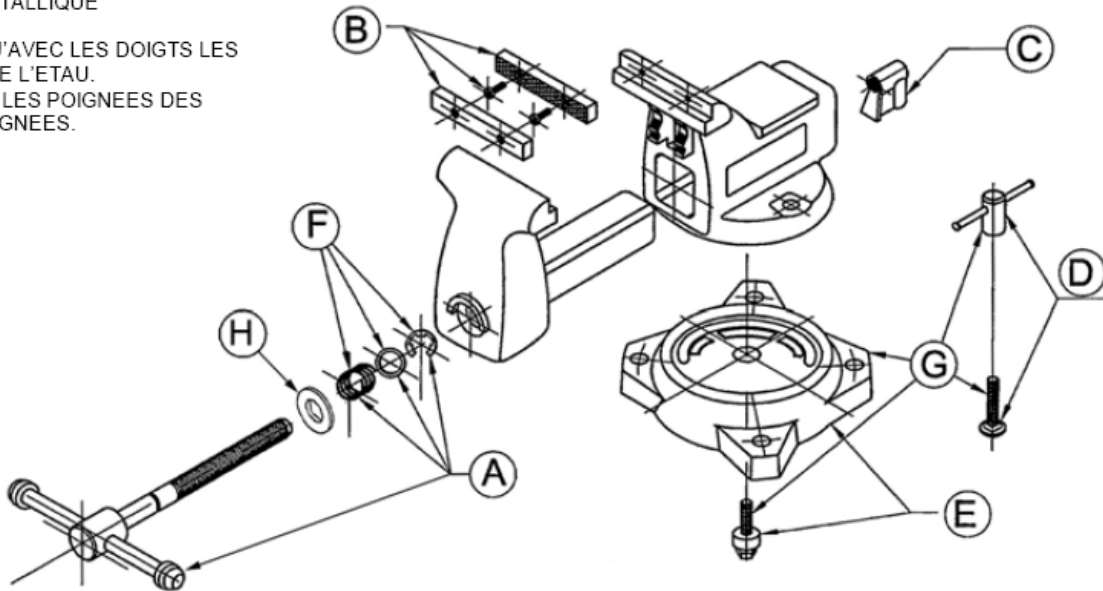

Replacement parts:

Spindle and Handle Assembly A	Serrated Jaw Inserts w/Screws B	Spindle Nut C	Lock Nut and Bolt Assembly D	Outer Ring w/ Bolt E	Spring, Washer, Clip Assembly F	Swivel Base Assembly G	Thrust Bearing Washer H
90805-2900560	90805-76654S41	90805-11113-15	90805-11103S51	90805-2900670	90805-11103S25	90805-2900710	11126-1